


Chain Breaker Instructions

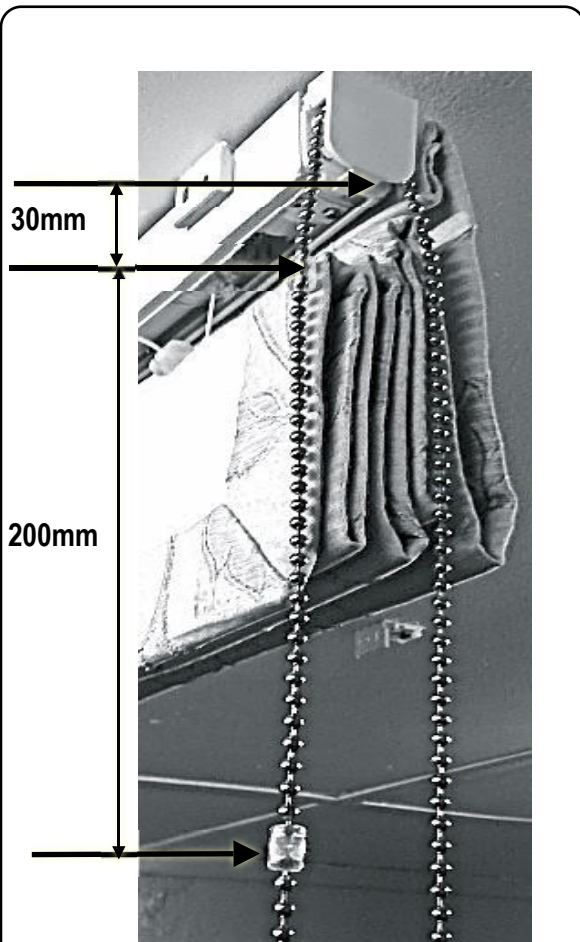

With the blind fabric wound in the fully up position, fit the chain so that the top chain breaker is 30mm below the bottom of the headrail.


The second chain breaker should be positioned 200mm below the first (as shown in the top photo). Draw the chain down from the back so that the blind drops to its' required maximum drop.

With the blind kept in this position fit the remaining chain breaker as a stop so it is positioned 30mm below the bottom of the headrail on the front part of the chain (as shown in lower photo left).

There is no need to break the chain, it is merely a stop.

Please ensure when ordering, sufficient chain is allowed to enable the blind to drop to its' maximum position without any of the breakaways able to foul the rail.

Please Note: Chain Breakers should only be used on 1:1 ratio drives as they will not pass through a geared drive.

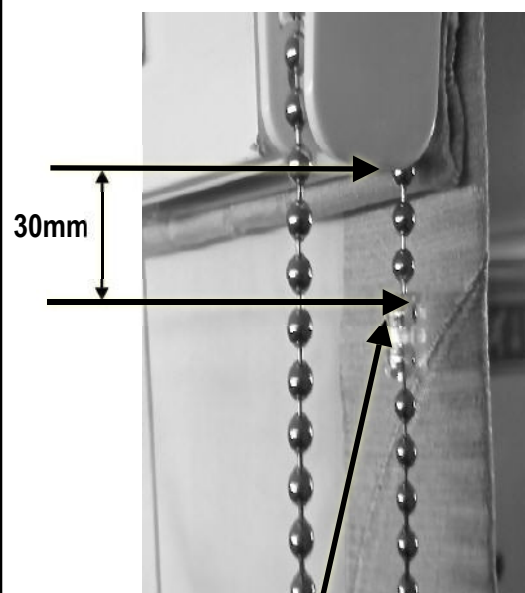

Breaker used as Stop